# Pressurized Line Liquid Sampling System

TELEDYNE ISCO Everywhereyoulook

## For the Isco 5800 Refrigerated Sampler

Instruction Sheet #60-5304-479 Revision B, December 5, 2012

### **Overview**

The pressurized line sampling system for the Isco 5800 sampler consists of the sampler, a relay alarm box, a 3-way actuated ball valve, an aluminum mounting plate, and, if pressures will be in excess of 15 psi, a pressure reduction valve. The system supports sampling from pipes with pressures up to 300 psi. This is also compatible with the 4700 Sampler.

# Operation

A normal sample routine consists of the sampler pumping first in reverse (pre-purge), then forward (bottle fill), and reverse again (post-purge).

When the sampler runs forward, it sends a signal to the relay alarm box (see the instructions under *Programming* to activate this function). The alarm box alerts the 3-way valve to allow pumping of the sample liquid. During pre-purge and post-purge, the valve causes the remaining liquid between itself and the sampler to be discharged through the third port into the user-supplied drain.

Pressures exceeding 15 psi must be reduced prior to reaching the 3-way valve to maintain accurate sample volumes and avoid damage to the system. Isco offers a stainless-steel pressure reduction valve with  $^{1}/_{2}$ " NPT fittings.

## **Site Requirements**

The discharge drain must be routed to a point at or near zero pressure for complete purging and prevention of cross-contamination between samples.

The Isco pressure reduction valve is not recommended for sample sources containing solids, or with viscosities higher than that of no. 2 oil. The user is responsible for any pre-filtering required.

The Isco relay alarm box is an essential component of this system. It is equipped with specific hardware, circuitry, and weatherproof enclosure not feasibly duplicated in the field.

The system must be positioned near a mains outlet that is easily accessible, so that power can be quickly removed in the event of an emergency.

The line cord is the only disconnect device. Mains power is applied to the system continually.

#### 

If this equipment is used in a manner not specified in the instructions, safety may be compromised.

# **Setup and Installation**

#### Programming

When enabled, a software option causes the sampler to delay the bottle fill and post-purge pumping steps by 10 seconds to allow the 3-way valve to fully open. This option *must* be enabled for proper filling and purging during pressurized sampling.

To enable the pump valve option:

1. Turn the sampler controller on. From the main menu, select CONFIGURE.



2. At SELECT OPTION, arrow to OUTPUT PINS and select.


SELECT OPTION (<- ->) OUTPUT PINS

3. Under SET OUTPUT 1, arrow to 3-WAY VALVE CONTROL and select.

SET OUTPUT 1: (<- ->) 3-WAY VALVE CONTROL

4. Continue programming output pins as needed, and then select EXIT CONFIGURATION.

SELECT OPTION (<- ->) EXIT CONFIGURATION

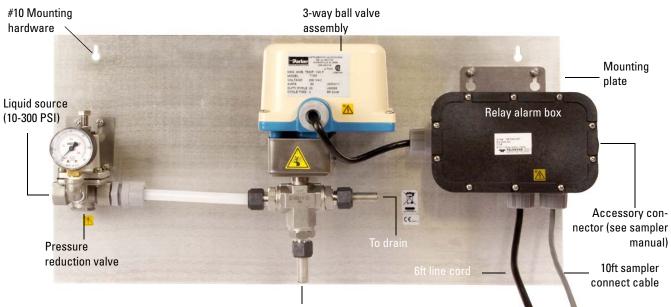

Output to sampler

#### **Figure 1: System Components**



Consult sampler manual for instructions



High Voltage warning



Pinch Point warning

# Plumbing and Positioning

Connect the drain to a point at or near zero pressure. A  $^{1}/_{2}$ " coupler is provided for connection to the sampler and discharge line. It may be necessary to heat the tubing in order to slip it over the coupler.

Connect the line from the pressurized source to the 3-way valve (or pressure reduction valve if used) with the shortest possible length of tubing.

#### Note Note

A manual shut-off valve (user-supplied) is recommended for placement between the sampling system and the sample source for purposes of system removal, should this become necessary. Ensure that the sampler outlet is positioned higher than its connection to the 3-way valve to ensure complete purging.

#### 

Ensure that the user-supplied connecting hardware between the liquid source and the system inlet can safely withstand the maximum pressures of the source.

#### Pressure Reduction Valve

The pressure reduction valve (Figure 2) is required for installations where pressures will exceed 15 psi. This is a one-way valve designed to reduce liquid pressure from up to 300 psi to a pressure adjustable between 3 and 30 psi. When used with Isco samplers, the pressure should be adjusted for 8 to 10 psi.



Figure 2: Pressure reduction valve (Shown uninstalled)

The valve comes pre-adjusted from the factory. Field adjustment is seldom required, if ever.

However, if adjustment should become necessary:

- 1. Loosen the lock nut located behind the pressure dial (Figure 3).
- 2. Turn the adjustment bolt clockwise to increase the valve's pressure output, or counterclockwise to decrease it.
- 3. If the pressure gauge does not read between 8 and 10 psi, repeat step 2.

#### Note

A sample cycle may be required for the gauge to register a pressure reading.

4. Tighten the lock nut to secure the adjustment bolt.

#### Wiring

Standard systems come pre-wired and mounted on the aluminum plate. For assistance with other types of Isco alarm boxes, additional alarm outputs, and systems that are not pre-wired, contact Teledyne Isco.

Connect the signal cable from the relay alarm box to the 16-pin connector on the back side of the sampler (see Figure 4).

Plug the line cord into the AC electrical outlet, and the system is ready for use.



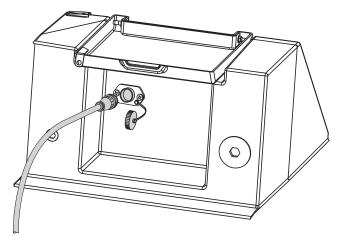


Figure 4: 5800 Rear Connector

#### Cleaning

To clean the system, use a mild detergent in water. For tougher stains, use isopropyl alcohol. If the installation location permits, the system may be hosed down.

# **Specifications**

#### **Table 1: Technical Specifications**

Mounting plate H x W	1 x 2ft (0.3 x 0.6m)
Weight	18 lb (8kg)
Power	120 VAC/60 Hz (system #68-5304-006)
	230 VAC, 50/60 Hz , 1.2A (system #68-5304-005)
Maximum input pressure	300 psi
Minimum input pressure	10 psi
System enclosure rating	NEMA 4X, IP66
Operating temperature	32 to 140 °F (0 to 60 °C)
Maximum liquid temperature	145 °F (62 °C)
Maximum altitude	2,000 miles
Pollution degree	3
Installation category	11

Last modified December 5, 2012

#### **Figure 3: Pressure adjustment**

#### **Teledyne Isco**

P.O. Box 82531, Lincoln, Nebraska, 68501 USA Toll-free: (800) 775-2965 • Phone: (402) 464-0231 • Fax: (402) 465-3001 E-mail: IscoService@teledyne.com



Teledyne Isco is continually improving its products and reserves the right to change product specifications, replacement parts, schematics, and instructions without notice.

# **DECLARATION OF CONFORMITY**

ISMI-A

Application of Council Directive:	2004/108/EC -The EMC Directive 2002/96/EC – The WEEE Directive 2006/95/EC– The Low Voltage Directive		
Manufacturer's Name: Manufacturer's Address:	Teledyne Isco, Inc. 4700 Superior Lincoln, Nebraska 68504-1398 USA P.O. Box 82531, Lincoln, NE 68501-2531 Phone: +1 (402) 464-0231 Facsimile: +1 (402) 465-3799		
Equipment Type/Environment:	Light Industrial/Commercial Environments		
Trade Name/Model No: Year of Issue:		em	
Standards to which Conformity is Declared:	EN 61010-1 2 <sup>nd</sup> edition EN 61326-1:2003	Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use EMC Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use	

Standard	Description	Severity Applied	Performance Criteria
EN61000-4-2	Electrostatic Discharge	4kV contact discharge 8kV air discharge	А
EN61000-4-3	Radiated RF Immunity	80 mHz to 2.7gHz, 80% AM at 1kHz 10V/m	А
EN61000-4-4	Electrical Fast Transient	2kV on AC lines	А
		1kV on I/O lines	
EN61000-4-6	Conducted RF on AC lines	150 kHz to 80 mHz, 3V rms, 80% modulated	A
CISPR11/ EN 55011	RF Emissions	Group 1, Class A Industrial, Scientific, and Medical Equipment	

The undersigned, hereby declares that the design of the equipment specified above conforms to the above Directive(s) and Standards as of April 18, 2011.

**USA Representative** 

William Dottes

William Foster Vice President of Engineering



60-5312-002